AMCARGOBIKES.CO.UK

Deluxe Display Engine and battery load

Adjust up

Adjustment of e.g. Assist Also activates PAS-walk/Walk-assist function Press down for 3 sec, and the bike will drive on its own, stops when button is released

Speedometer/km per hour Shows who fast you are driving in Km/h

SET

For adjustment of tripcounter, distance, wheel size and light on the display Km/Mile

Change, press + and - simultaneously for 4 sec

Adjustment down Adjustment of eg. Assist


On / off Turns the system (display and motor) on and off Assist level Shows who much the motor is assisting you in driving. Level 1-6

Voltage Shows how much voltage is on the battery

Battery level Shows ow much power is left in the battery


Trip/Kilometer counter/Odometer Shows how many kilometers the bike has driven in total

AMCARGOBIKES.CO.UK Display color model Ultimate Curve

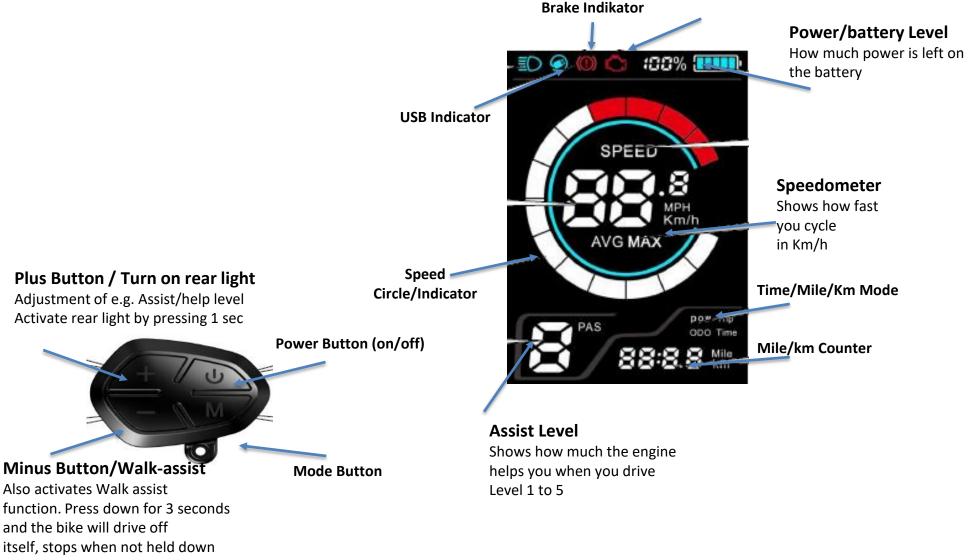

further

AMCARGOBIKES.CO.UK Display model Ultimate Curve

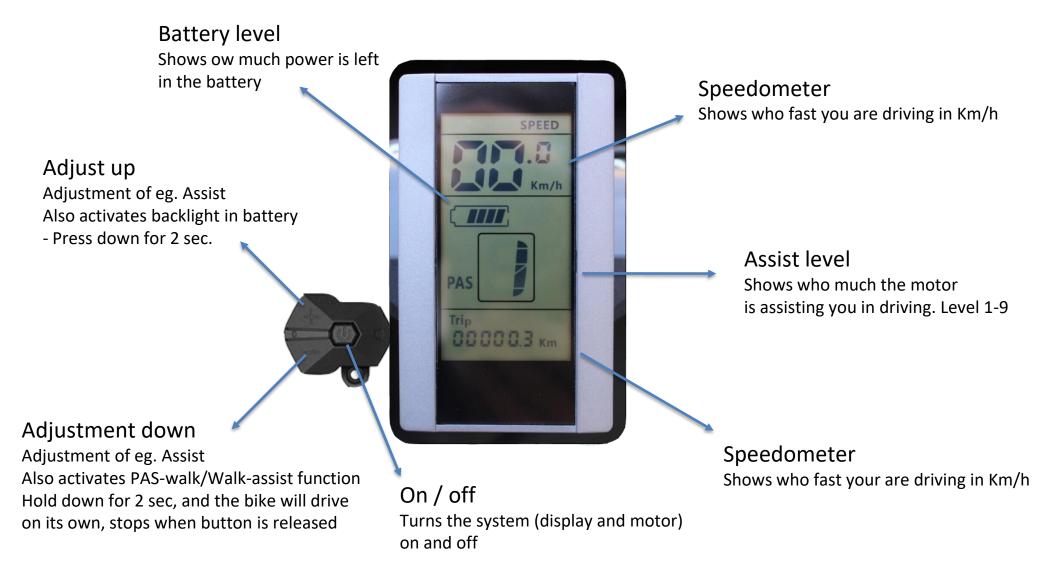

amladcykler.dk Display model Ultimate Harmony



on its own, stops when button is released

AMCARGOBIKES.CO.UK Display

Adjust up

Adjustment of eg. Assist Also activates PAS-walk/Walk-assist function Press down for 3 sec, and the bike will drive on its own, stops when button is released

Battery level Shows ow much power is left in the battery Loading Shows how much the motor and battery is loaded

Assist level

Speedometer

Shows who fast you are driving in Km/h

SET

For adjustment of tripcounter, distance, wheel size and light on the display

Km/Mile

Change, pres + og - simultaneously for 4 sec

Adjustment down Adjustment of eg. Assist On / off Turns the system (display and motor) on and off Shows who much the motor is assisting you in driving

Kilometer counter/Odometer Shows who many kilometers the bike has driven in total

AMCARGOBIKES.CO.UK Older display

