

# Amcargobikes

Cargo bike enthusiast since 1992

## Ramp / Dog door



## INSTALLATION INSTRUCTIONS


# Amcargobikes

Cargo bike enthusiast since 1992

## Step 1: Mounting the front door

- The front plate is pre-cut into three pieces: two small pieces that must be mounted on each side and the middle piece that must be able to fold down.

Start by assembling the two small pieces as shown in Figures 1B and 1C. They are mounted with the 2x3 10mm bolts, washers and nuts that are left over from the assembly of the rest of the bike.

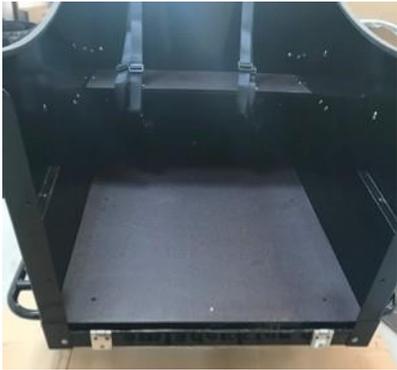

Picture 1A



Picture 1B



Picture 1C



- Holes are drilled to mount the hinges with a 6 mm drill - see picture 1D.
- The front door is mounted with the 6 pcs. M4 16 mm bolts, discs and nuts - see picture 1E and 1F.



Picture 1D



Picture 1E




Picture 1F

# Amcargobikes

Cargo bike enthusiast since 1992

## Step 2: Install the closing bracket

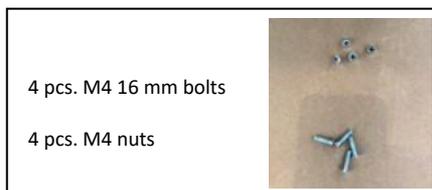


- Holes are drilled to mount one part of the closing bracket through the wooden plate and the metal in the corner bracket on both sides. Use a 5 mm drill - see picture 2A.
- The fittings are mounted with 4 pcs. M4 16 mm bolts and nuts (no discs) - see picture 2B.



Picture 2A



Picture 2B

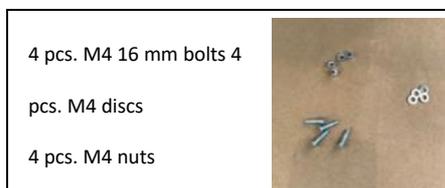

- Holes are drilled to mount the other part of the closing bracket on both sides. Use a 5 mm drill - see picture 2C. Make sure to keep a good distance so that the closing bracket closes tightly.
- The fittings are mounted with 4 pcs. M4 16 mm bolts, discs and nuts - see picture 2D and 2E.



Picture 2C



Picture 2D



Picture 2E

# Amcargobikes

Cargo bike enthusiast since 1992

## Step 3: Installing the headlight and reflectors

- Drill a hole with a 6 mm drill in the middle of the front plate just above the logo - see picture 3A.
- The headlight is mounted with the headlight bracket - see picture 3B, 3C and 3D.



Picture 3A



Picture 3B



Picture 3C



Picture 3D

- The reflectors are mounted - see picture 3E.



Picture 3E